

101 = Bad HID device information set handle  
102 = No devices found in device information set  
103 = Other enumeration error  
104 = Error getting device interface detail (symbolic link name)  
105 = Unable to open a handle.

201 = Bad interface handle  
202 = Cannot allocate memory for ring buffer  
203 = Cannot create mutex  
204 = Cannot create read thread  
205 = Cannot open read handle  
206 = Cannot open read handle - Access Denied  
207 = Cannot open read handle - bad DevicePath  
208 = Cannot open write handle  
209 = Cannot open write handle - Access Denied  
210 = Cannot open write handle - bad DevicePath

301 = Bad interface handle  
302 = Read length is zero  
303 = Could not acquire data mutex  
304 = Insufficient data(< readSize bytes)ie. buffer empty  
305 = Could not release data mutex  
306 = Could not release data mutex

401 = Bad interface handle  
402 = Write length is zero  
403 = Write failed  
404 = Write incomplete

501 = Bad interface handle  
502 = Read length is zero  
503 = Could not acquire data mutex  
504 = Insufficient data (< readSize bytes)ie. no bytes read since buffer cleared or device started.  
505 = Could not release data mutex  
506 = Could not release data mutex

601 = Bad interface handle  
602 = Could not release data mutex  
603 = Could not acquire data mutex